

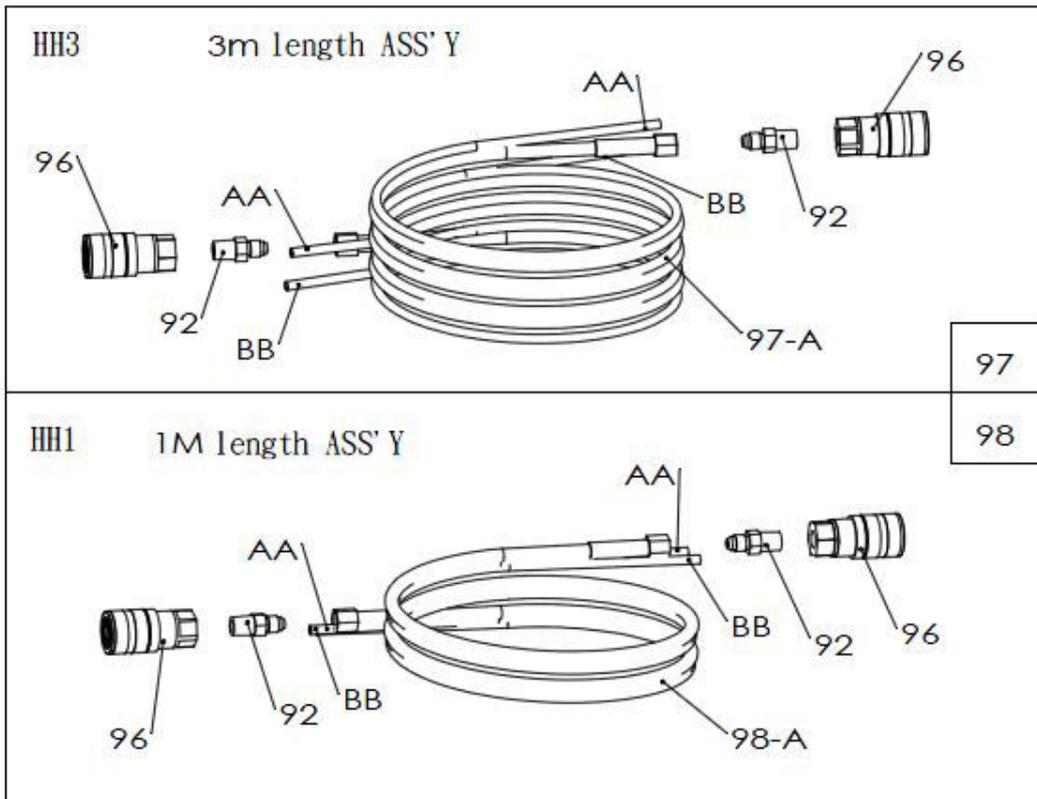


**ZT0518S 5/32"(4.0mm) Split Type Air Hydraulic Riveter**

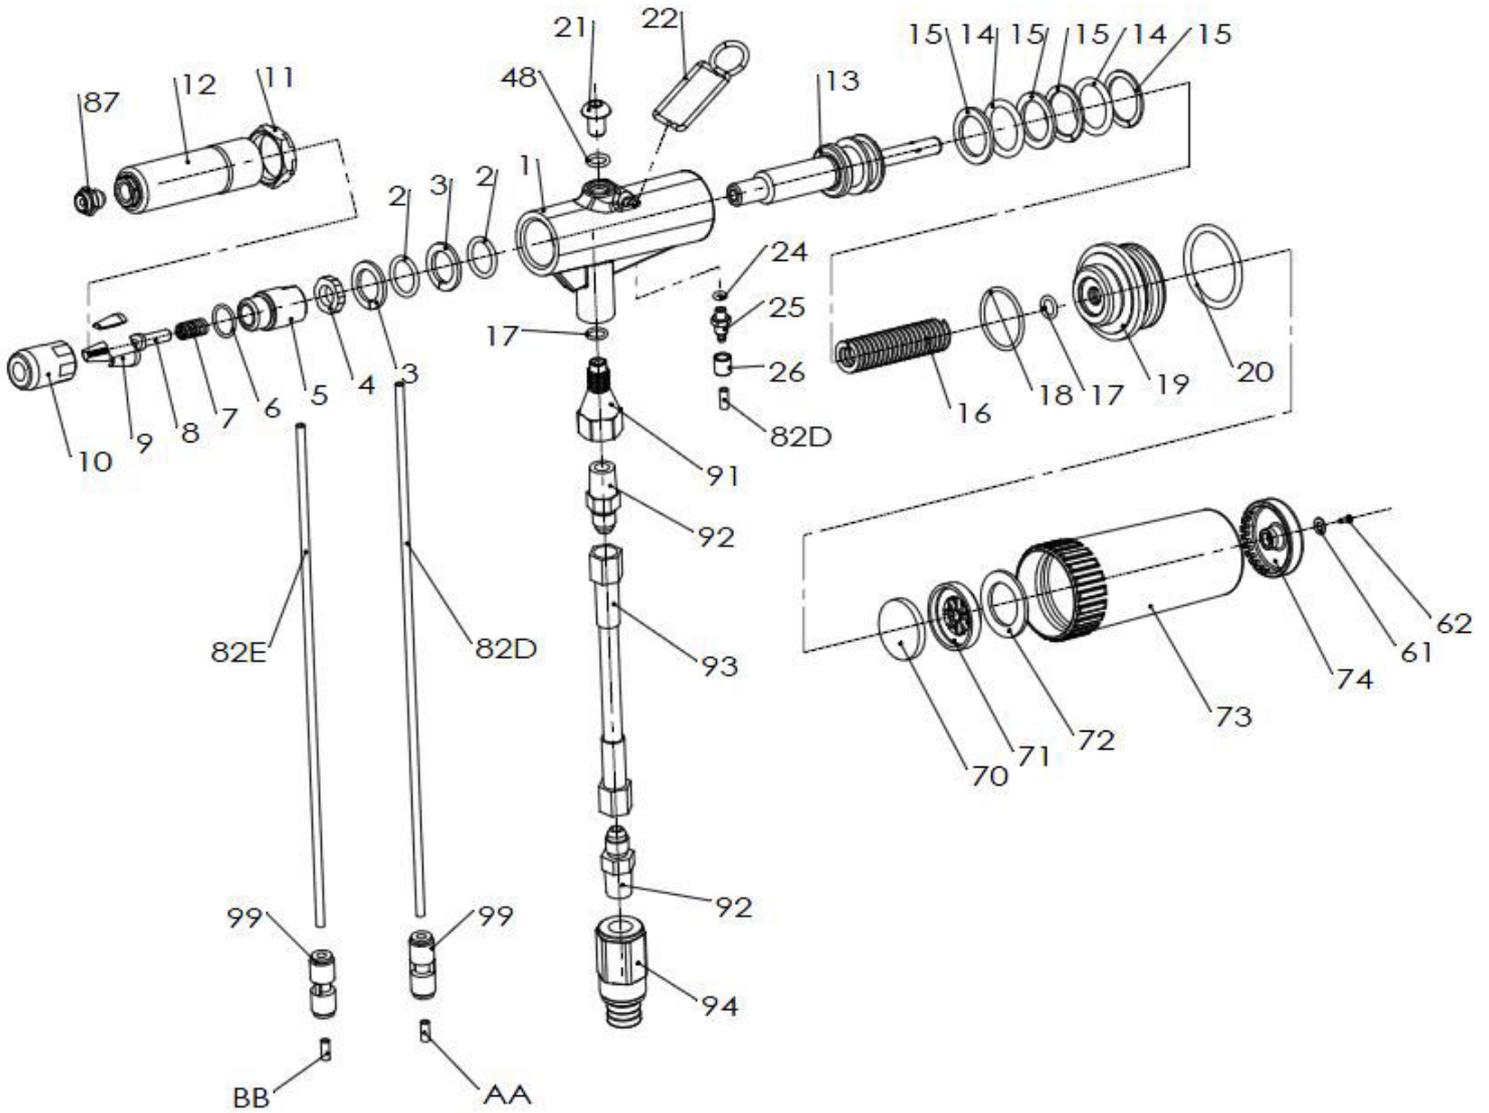


**ZT0518S 5/32"(4.0mm) Split Type Air Hydraulic Riveter**

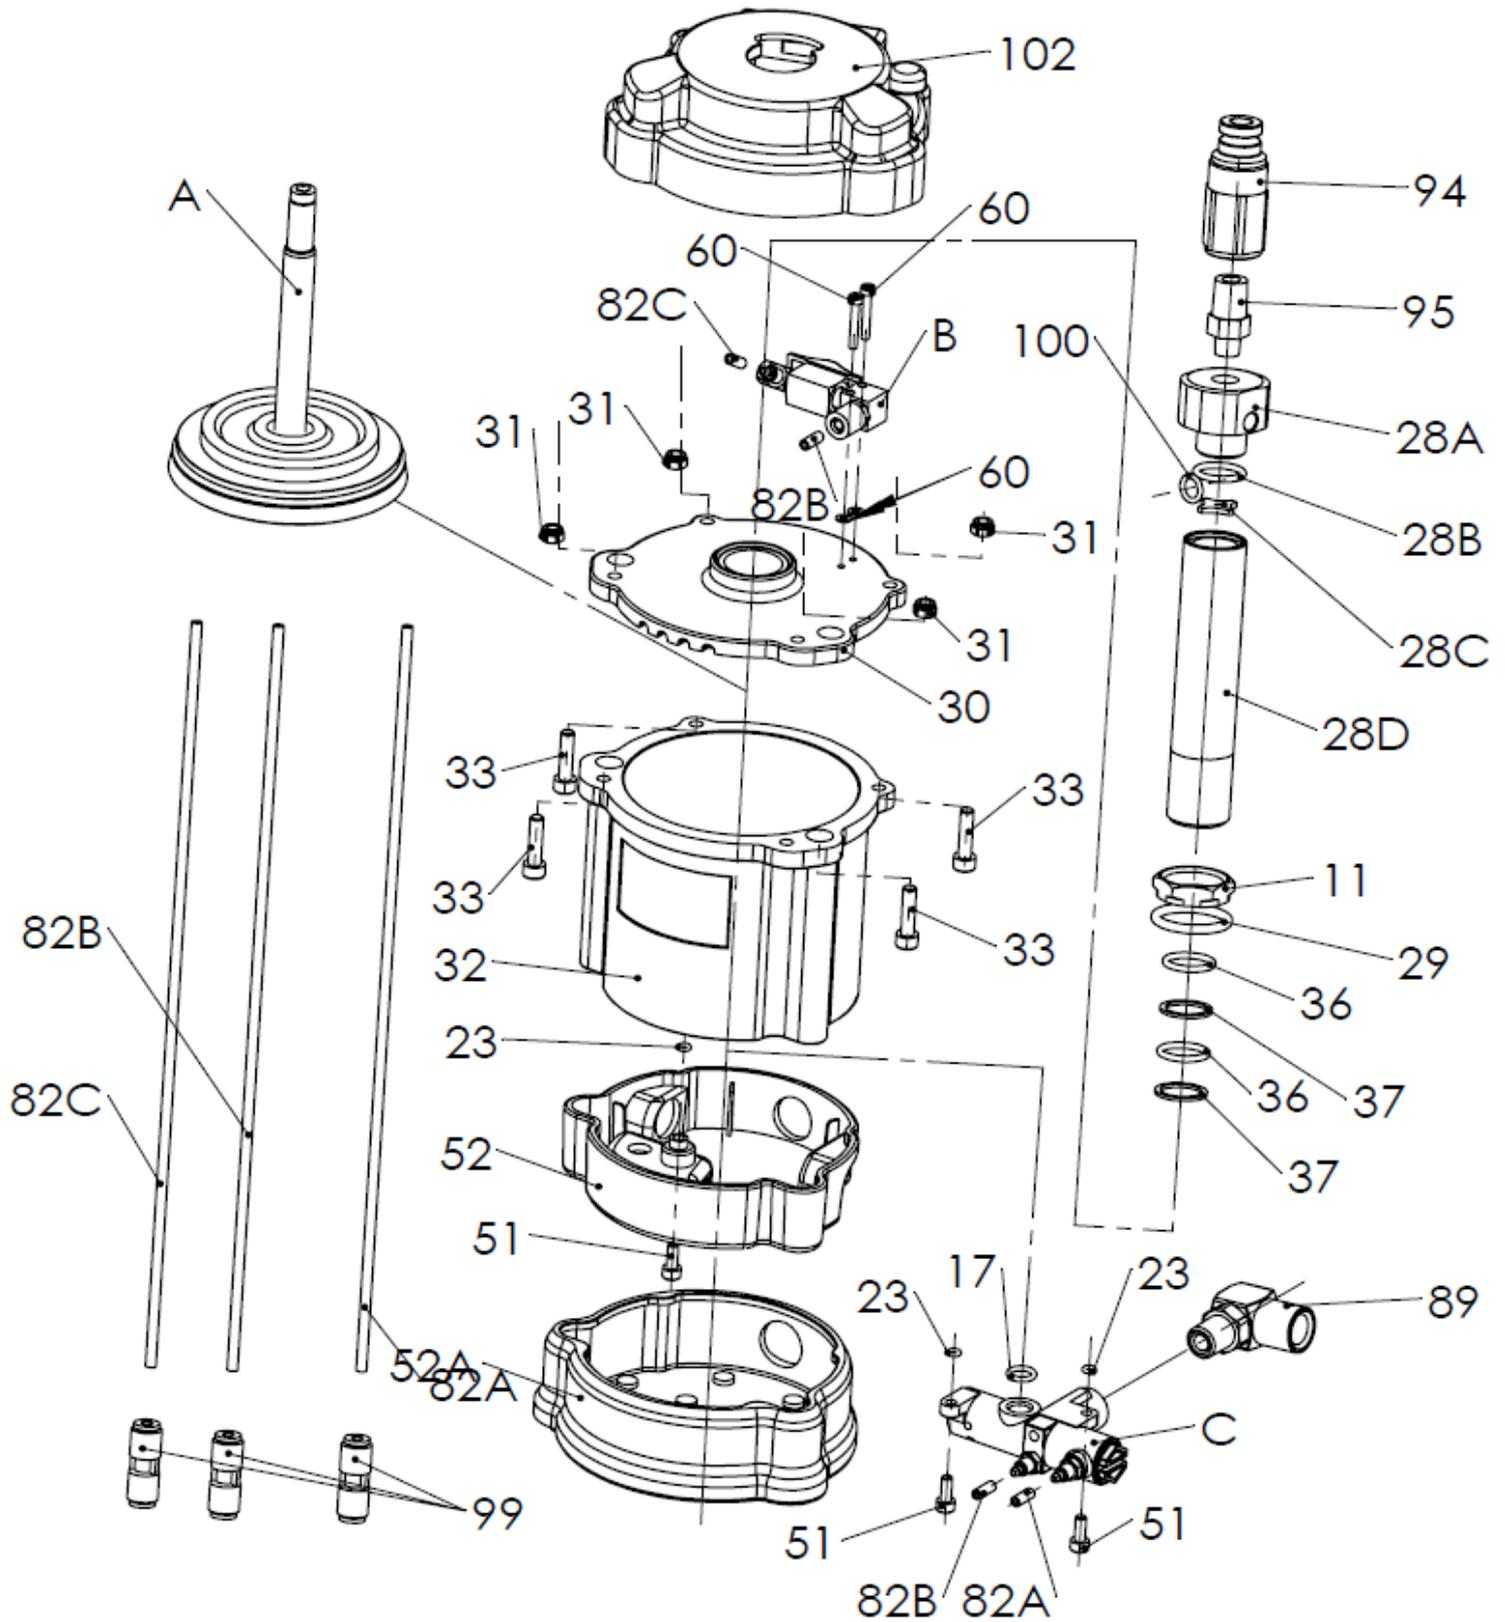


# ZT0518S 5/32"(4.0mm) Split Type Air Hydraulic Riveter




Ⓐ ASS'Y

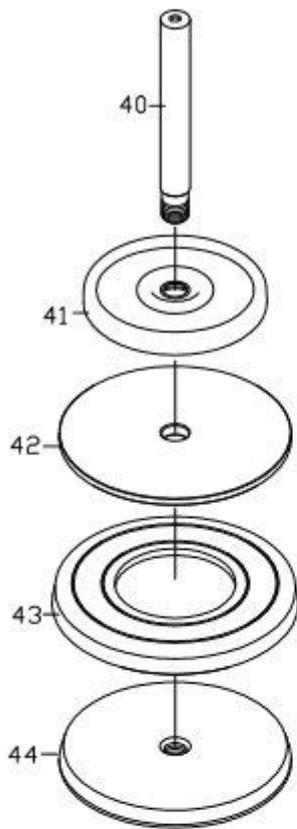

Ⓑ ASS'Y

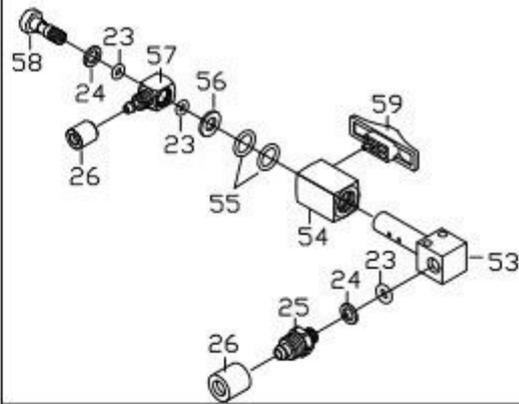

Ⓒ ASS'Y

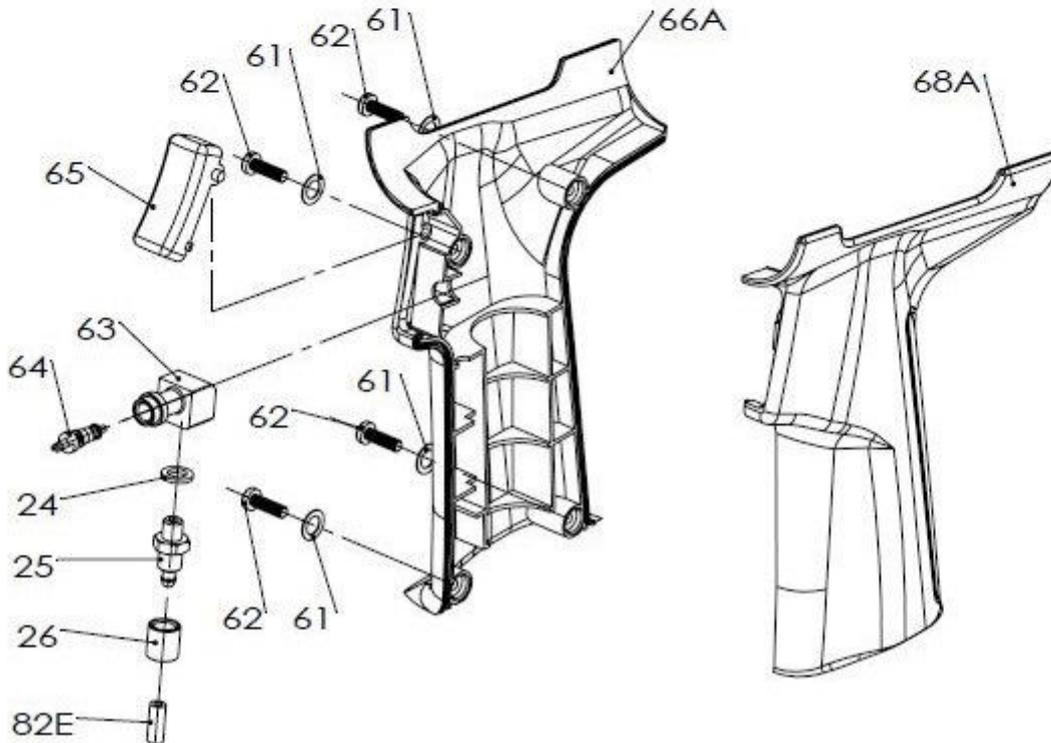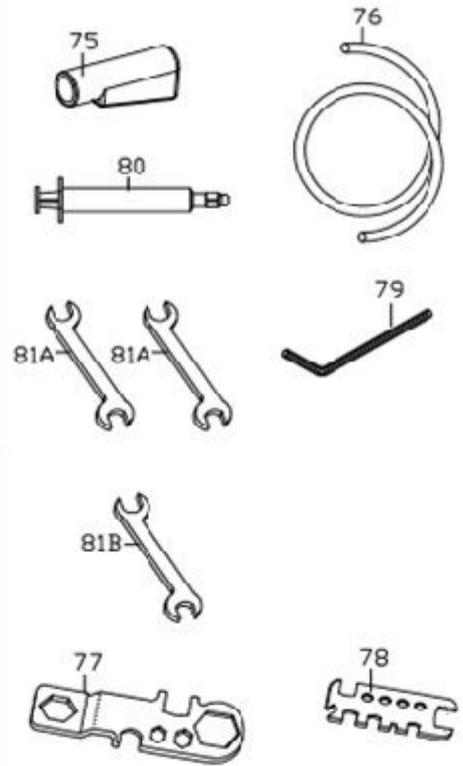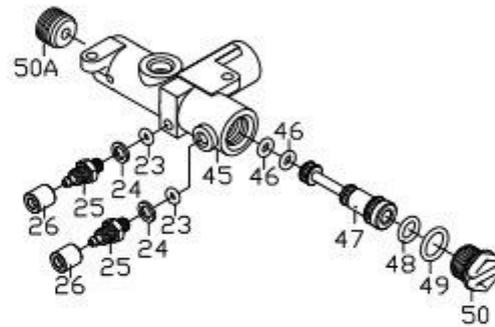

## ZT0518S 5/32"(4.0mm) Split Type Air Hydraulic Riveter

<b>TECHNICAL DATA</b>	Traction Power	lbf(kgf)	:	1100 (500)
	Stroke Length	mm	:	18
	Handle Net Weight	lbs(kgs)	:	2.2 (1)
	Nosepieces Equipped	inch(mm)	:	5/32(4.0) , 1/8(3.2), 3/32(2.4)
	Max. Capacity		:	Max. 5/32"(4.0mm)blind rivets in all materials

### P A R T S    L I S T

Index	Part #	Description	Index	Part #	Description
1.	520101R	Hydraulic Section	53.	922701	Vacuum Valve
*2.	OR2025	O-RING (2)	54.	922702	Sleeve
*3.	BR2025	Back-Up Ring (2)	55.	OR0811	O-RING (2)
4.	214306	Nut	56.	PW0510	Washer
5.	317305	Jaw Housing Coupler	57.	612712	Swivel
7.	317308	Spring	58.	612713	Socket
8.	520302	Jaw Pusher	59.	922703	Vacuum Switch
*9.	317303	Jaw (2)	60.	HC00305020	Set Screw (2)
10.	520304	Jaw Hosing	61.	PW0306	Washer (7)
11.	918106	Lock Nut	62.	ST0310	Screw (5)
12.	317105	Head	63.	107602	Valve Body
13.	<b>520311</b>	<b>Hydraulic Plunger</b>	64.	107601	Bleeding Valve
*14.	OR2229	O-RING (2)	65.	107201R	Trigger
*15.	BR2229	Back-Up Ring (4)	<b>66A.</b>	<b>922117R</b>	<b>Plastic Grip-Right</b>
16.	922309	Return Spring	<b>68A.</b>	<b>922117L</b>	<b>Plastic Grip-Left</b>
17.	OR0812	O-RING (3)	70.	919904	Silencer
18.	OR2832	O-RING	71.	919903	Muffler Seat
19.	922102	Rear Gland	72.	919905	Silencer
20.	OR3542	O-RING	73.	919901	Mandrel Collector
21.	HR00812508	Set Screw(2)	74.	919906	Muffler Cap
22.	258801	Hanger	75.	612901	Deflector
23.	OR0306	O-RING (8)	76.	612902	PU Tube (OPT.)
24.	612714	Washer (6)	77.	612904	Multi-Wrench (A)
25.	612717	Socket (5)	78.	918905	Multi-Wrench (B)
26.	612711	Cap (6)	79.	314755	5mm Hex. Wrench
27.	520106	Nut	80.	922901	Oiler
28A.	<b>927802</b>	<b>Adaptor</b>	81A.	144905	17x19 Wrench
28B.	OR1417	O-RING	81B.	144903	10X11 Wrench (2)
28C.	8211012	Hydraulic Tube Washer	82A.	520704A	2.5x4 PU Hose(Black)
28D.	5201081	Hydraulic Tube Connector-A	82B.	520704B	2.5x4 PU Hose(Orange)
28E.	5201083	Washer	82C.	922704C	2.5x4 PU Hose(Orange)
29.	OR2025	O-RING	<b>82D</b>	<b>922704D</b>	<b>2.5x4 PU Hose(Black)</b>
30.	520401R	Upper Cover	<b>82E</b>	<b>922704E</b>	<b>2.5x4 PU Hose(Orange)</b>
31.	NN005080B	Nut (4)	87.	612703	Nose Piece 3/32" (2.4mm)
32.	520403R	Air Cylinder Body		612704	Nose Piece 1/8" (3.2mm)
33.	HC00508020	Set Screw (4)		612705	Nose Piece 5/32" (4.0mm)
*36.	OR1621	O-RING (2)	89.	92L2	Air Inlet Assembly
*37.	BR1621	Back-Up Ring (2)	90	520SK	Service Kit (opt.) (No.02.03.09.14.15.36.37.46. 48.49.99)
40.	520501	Plunger Rod	<b>91</b>	<b>9207601</b>	<b>Hydraulic cylinder adaptor</b>
41.	202505	Bumper Ring	<b>92</b>	<b>9207602(4)</b>	<b>Hydraulic tube adaptor</b>
42.	107503	Front Head Disc	<b>93</b>	<b>920801</b>	<b>Hydraulic Hose - Handle</b>
43.	819502	Packing Ring	<b>94</b>	<b>9207603(2)</b>	<b>Hydraulic Male Quick Coupler</b>
44.	107502	Lower Plate	<b>95</b>	<b>9207604</b>	<b>Adaptor</b>
45.	919211	Valve Case	<b>96</b>	<b>9207605(2)</b>	<b>Hydraulic Female Quick Coupler</b>
*46.	OR0408	O-RING (2)	<b>97</b>	<b>HH3</b>	<b>3m length hydraulic hose set w/quick coupler</b>
47.	919202A	Valve Stem	<b>97-A</b>	<b>H3</b>	<b>3m length hydraulic hose</b>
*48.	OR0711	O-RING (3)	<b>98</b>	<b>HH1</b>	<b>1m length hydraulic hose set w/quick coupler</b>
*49.	OR1014	O-RING	<b>98-A</b>	<b>H1</b>	<b>1m length hydraulic hose</b>
50.	107409	Inlet Plug	<b>99</b>	<b>9207606(4)</b>	<b>Pneumatic Quick Coupling</b>
50A	922409	Socket Screw	<b>100</b>	<b>OR0609</b>	<b>O-RING</b>
51.	HC00407010	Set Screw (3)	<b>101</b>	<b>CHBT-004</b>	<b>Pouch ( standard for 1M length )</b>
52.	922402	Base	<b>102</b>	<b>922400</b>	<b>protection cap</b>
52A	922404	Rubber Boot			